



3 ZONE EN 12094-1
automatic extinguisher
control panel









# range


With the growing emphasis on safeguarding property as well as people, the market for automatic fire suppression systems is booming. The EP203 three zone automatic extinguisher panel from C-TEC has been specifically designed to meet this demand.

Third-party approved to EN 12094 part 1 (Fixed Firefighting Systems - Components for Gas Extinguishing Systems) and EN54 parts 2 & 4 by the LPCB, the panel epitomises quality, durability and reliability and is ideal for use in any area housing expensive, dangerous or irreplaceable items of equipment.

Featuring an intuitive 128 x 64 pixel two-colour graphic display that gives clear and concise feedback to the user, installer and commissioning engineer, the panel also includes six monitored inputs (including hold and abort), a time stamped log, adjustable flood times and volt-free changeover relays for fire, local fire, 1st stage active, 2nd stage active, extractor fan and fault.


The panel is supplied in an elegantly styled, durable enclosure with all of its electronics - apart from its powerful 3A EN54-4 switch mode PSU - mounted on a detachable metal bridge plate for ease of installation. A wide range of ancillaries are also available including remote status units, hold-off and abort buttons, line terminators and output expansion relay boards.



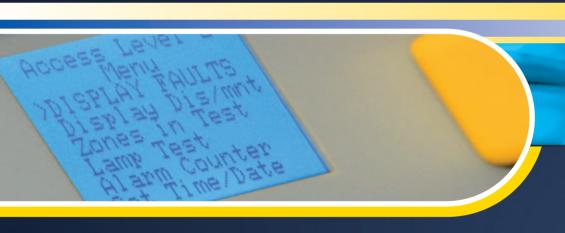

- LPCB approved to EN 12094 part 1 and EN54 parts 2 & 4
- Functions as a standard three zone fire panel with additional circuitry for controlling the release of fire-suppressing gas into protected areas
- Unique 128 x 64 pixel graphical display facilitates straightforward system programming
- Any combination of activated zones can be programmed to automatically start the panel's extinguishant release sequence
- Includes a pull-down front-panel manual release button and two keyswitches for accessing the panel's functions and toggling between auto/manual mode
- Three conventional sounder circuits (two x 1st stage, one x 2nd stage)
- Powerful 3A EN54-4 compliant switch mode PSU
- Low quiescent current less than 40mA on mains fail

- Wide range of monitored inputs and auxiliary outputs (see schematic)
- Abort and hold inputs allow the panel's release sequence to be cancelled or suspended at any time
- Time-stamped event log
- RS485 connections for up to eight flush or surface remote status units with their own LCDs, manual release and mode (auto/manual) switches. Single gang economy status units (without an LCD) are also available.
- Extensive range of commissioning and engineering functions
- Optional relay expansion boards and single gang abort and hold buttons
- Ideal for use in computer rooms, telecommunication centres, archive storage areas, chemical plants, generator rooms, museums, etc..
- System line terminator included with all panels

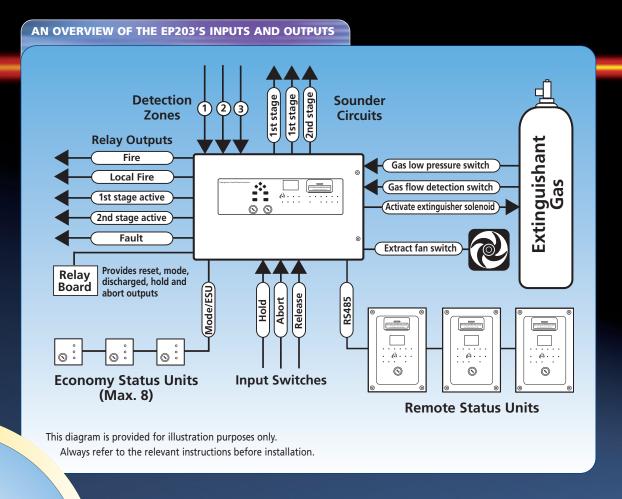

### COMMISSIONING & ENGINEERING FUNCTIONS

▶ Zone selection: Selects the zone combination that starts the extinguishant release sequence

► Extinguishant delay: Sets the countdown duration before extinguishant release

► Extinguishant duration: Sets the duration of the firing signal to the extinguishant output

Sets the duration for the release of extinguishant

Enables/disables the ventilation extract option

Sets the duration for the ventilation extract fan operation

Sets the delay duration before the fire sounders are activated

### Remote status unit learn:

Finds all remote status units and updates the panel's database

### Extinguishant output EOLS:

Selects the number of extinguisher circuit terminations

Selects the default setting mode when the mode input is in

► Earth fault: Disables/enables the panel's earth fault monitoring circuitry

Selects either delayed or immediate release of extinguishant

Zone trigger: Enables a short circuit condition on the three detection zones

Clears the panel's memory back to its default factory settings

► Walk test: Puts detection zone(s) into walk test mode

► Test relays: Tests the panel's auxiliary relay outputs

► Test sounders: Tests the panel's sounder circuits

Applies a constant monitoring voltage

Displays the status of the panel's power supply & standby



Includes all of the circuitry for controlling the extinguishant release, a pull-down manual release button, a 128x64 pixel LCD display plus all of the features listed left. W467 x H293 x D100 mr

panel to provide volt-free changeover relay contacts for reset, mode, discharged, hold and abort. Max. 1 per

W162 x H70 x D20mm

manual release and mode Max. 8 EP210F/EP210S per EP203. Weatherproof order code BF359/1. W175 x H250 x D53mm



Includes a status LCD. manual release and mode (auto/manual) switches. Max. 8 EP210F/EP210S per EP203. Weatherproof enclosure also available, order code BF359/1. W160 x H240 x D51mm



operated mode (auto/manual) switch and three status LEDs. Max. 8 per EP203.

W87 x H87 x D35mm



Allows the EP203's extinguishant release output to be terminated to a gas release solenoid. Max. 2 per EP203 (one

W55 x H55 x D22mm



An IP66 rated button that can be used to delay (hold off) or cancel (abort) the extinguishant release sequence depending on

W93 x H93 x D88mn



A surface mounting manual call point that can be used to remotely trigger the EP203's extinguishant release sequence



regulated lead acid batteries and a link wire for use as the EP203's standby battery supply.

W150 x H100 x D64mm (x2)

### Why are automatic extinguisher systems required?

Although safeguarding people is an obvious mandate for any fire alarm system, protecting property and the systems that allow businesses to function comes a close second. Few enterprises can now operate without an IT department, so it is essential the technology they use is sufficiently protected from fire. A small, unattended blaze in a server room can destroy thousands of pounds worth of equipment and cause hours of downtime from which it can be difficult to recover. In areas such as chemical plants the consequences of a fire can be even worse, so it's no wonder the provision of extinguishant systems is on the increase.

### How do automatic extinguisher systems work?

Automatic extinguisher systems work by controlling the release of fire-suppressing gas into areas where fires need to be put out quickly, with minimal damage to the equipment being protected. A typical automatic extinguisher system comprises the fire suppressing agent – usually an inert gas such as Argonite – storage containers, release valves, fire detectors, the control panel (and ancillaries), delivery piping and dispersion nozzles.

### How difficult is an extinguisher system to install?

Fitting an extinguising system clearly requires a degree of expertise. However, the EP203 is incredibly easy to install. It is the first EN 12094 part 1 compliant extinguisher panel to feature an intuitive 128 x 64 pixel display that

gives clear and concise feedback to the user, installer and commissioning engineer. This allows engineers to commission with confidence without having to refer to complicated LED arrays, convoluted 7-segment displays and look-up sheets ... everything is in plain English.

### A plethora of features

Despite the EP203's ease of programming, it is one of the most powerful extinguisher panels on the market. It includes three conventional detector circuits and three conventional sounder circuits (2 x 1st stage, 1 x 2nd stage), all of which are line monitored for open and short circuit faults. Any combination of activated detector zones can be programmed to automatically activate the panel's extinguishant release sequence, which can be set to operate with or without a delay. No less than six monitored inputs are also provided, including Hold and Abort for suspending or cancelling the release sequence at anytime. An optional relay expansion board can also be fitted to provide reset, mode, discharged, hold and abort outputs.

Other features include adjustable flood times, an alarm counter that records the number of occasions the panel has been in alarm, a time-stamped log, support for up to two solenoids or multiple Metrons and volt-free changeover relay contacts for fire, local fire, first stage active, second stage active, extract fan and fault.

### **System expansion**

For additional flexibility, up to eight flush or surface remote status units, each with their own displays, manual release mechanisms and mode switches, can be connected to the EP203 via a monitored RS485 bus. Single gang economy status units without a display are also available (8 per system). The availability of these and a host of other ancillary devices including system line terminators and hold off/abort buttons, makes the EP203 ideal for use in computer rooms, telecommunication centres, archive storage areas, chemical plants, generator rooms, museums and more.



# **EP203 Automatic Extinguisher Panel Technical Specifications**

Power Supply Specification

| Mains supply voltage  | 230Vac, 50/60Hz   |
|---|---|
| Internal power supply   | 24Vdc nominal   |
| Max. output current   | 3A@230Vac   |
| Power rating (including charging)   | 1.5A cont., 3A peak   |
| Battery type  | 2 x 12Vdc, 7Ahr VRLA type, connected in series                                      |
| Battery charge current  | 0.7A  |
| Earth fault monitoring  | YES   |
| Mains supply/battery charger monitored for failure  | YES   |
| Batteries monitored for disconnection and failure   | YES   |
| Quiescent current drain on mains fail   | 40mA approx.  |
| Power rating (including charging) Battery type Battery charge current Earth fault monitoring Mains supply/battery charger monitored for failure Batteries monitored for disconnection and failure | 1.5A cont., 3A peak 2 x 12Vdc, 7Ahr VRLA type, connected in series 0.7A YES YES YES |

### **Detector Circuit Specification**

| Number of conventional detector circuits                        | 3 @ 21-28Vdc        |
|---|---------------------|
| Line monitored for open and short circuit faults                | YES                 |
| Max. cable length per circuit                                   | 250m                |
| Max. no. of smoke/heat detectors per circuit                    | 20                  |
| Max. combined no. of detectors & manual call points per circuit | 32                  |
| Zone quiescent current  | 2mA max.            |
| End-of-line resistor value                                      | 6K8 ohm ± 5%, 0.25W |
|   |                     |

### Sounder Circuit Specification

| No. of conventional circuits                     | 3 (two x 1st stage, one x 2nd stage) |
|--|--------------------------------------|
| Line monitored for open and short circuit faults | YES                                  |
| Sounder outputs rating                           | 21-28Vdc, fused @200mA per circuit   |
| Max. sounder cable length per circuit            | 50m                                  |
| Max. number of polarised sounders per circuit    | 10 @ 20mA each                       |
| End-of-line resistor value                       | 6K8 ohm ± 5%, 0.25W                  |

### Auxiliary outputs

| No. of auxiliary outputs * | 6 (Fire, Local Fire, Extract Fan, 1st Stage, 2nd Stage, Fault) |
|----------------------------|--|
| Relay contact rating       | 30Vdc, 1A max.   |

<sup>\*</sup> Note that 5 additional relay outputs (Reset, Mode Switch, Discharged, Hold, Abort) are available on the EP212 relay output expansion card

### Extinguishant release outputs

| Extinguishant release output        | 21-28Vdc, rated at 1A for 5mins.            |
|-------------------------------------|---|
| Extinguishant release time delay    | Adjustable 0-60 seconds (1 second steps)    |
| Extinguishant release duration      | Adjustable 1-300 seconds (1 second steps)   |
| Extinguishant release flooding time | Adjustable 60-1800 seconds (1 second steps) |
| Extinguishant output end-of-line    | "Terminator" circuitry EOL (Part No. EP214) |

### **Monitored Inputs**

| Number of monitored inputs and type | 6 (Manual Release, Flow Switch, Low Pressure, Mode, Hold, Abort)                 |
|-------------------------------------|--|
| Thresholds                          | 8k to 2k ohms (normal); 1.8k to 200 ohms (active), 150 to 0 ohms (short circuit) |
| End-of-line resistor value          | 6K8± 5%, 0.25W   |

### Controls & Indicators

| Status Display Unit            | 128 x 64 pixel graphic LCD unit, two-colour backlight  |  |
|--------------------------------|--|--|
| LCD 'Access Level 1' Menus:    | Display Faults    Display Disablements    Zones in Test    Lamp Test    Alarm Counter  |  |
| LCD 'Access Level 2' Menus:    | Display Faults • Display Disablements • Zones in Test • Lamp Test • Alarm Counter • Set Time/Date • Event Log     Display Contrast • Disablements  |  |
| LCD 'Access Level 3' Menus:    | Display Faults    Display Disablements    Zones in Test    Display RSUs    Disablements    Commissioning    Engineering  |  |
| Controls (2 x keyswitches)     | Accessed    Manual Only or Manual & Automatic  |  |
| Controls (push buttons)        | Menu   |  |
|                                | Accept • Extinguisher Release (housed in yellow casing).   |  |
| Indicators (LEDs)              | General Fire • Fire Zones (x3) • General Disablement • Zone Fault/Disable/Test (x3) • Hold • First Stage Output • Release Imminent (x2)     Extinguishant Released • Abort • Disablements (Extinguishant Release, Manual Release, First Stage Output, Second Stage Output, Sounder)     Manual Only • Manual & Automatic • Supply Present • PSU Fault • Accessed • Test • General Fault • System Fault • Delays     Sounder Fault • Flooding Zone Fault • Low Press Fault. |  |
| Internal control (push button) | Access Level 3 Switch (located on Main Control PCB)  |  |

### Dimensions (W x H x D)

| Dimensions | Back box = 439mm x 276mm x 70mm approx. (metal);<br>Lid = 467mm x 293mm x 29mm approx. (plastic) |
|------------|--|
| Weight     | 4.65kg (without batteries)   |



## Manufactured by C-TEC,

Challenge Way, Wigan, WN5 OLD. England UK Sales: Tel: 01942 322744. Fax: 01942 829867.

Email: sales@c-tec.co.uk

European Sales: Tel: +44 1942 322744. Fax: +44 1942 829867.

Email: eu.exports@c-tec.co.uk

Export Sales: Tel: +44 161 257 2541. Fax: +44 161 225 8817.

Email: xportsales@xportsales.com







### Distributed by: