



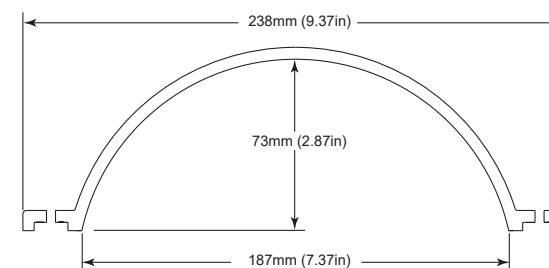

Safety Technology International

European Office
Taylor House • 34 Sherwood Road • Bromsgrove
Worcestershire • B60 3DR • England
Tel: 44 (0) 1527 520 999 Fax: 44 (0) 1527 501 999
E-mail: info@sti-emea.com • Web: www.sti-emea.com

USA - Headquarters
2306 Airport Road • Waterford, Michigan 48327-1209
Phone: 248-673-9898 • Fax: 248-673-1246
Toll Free: 800-888-4784 • E-mail: info@sti-usa.com
Web: www.sti-usa.com

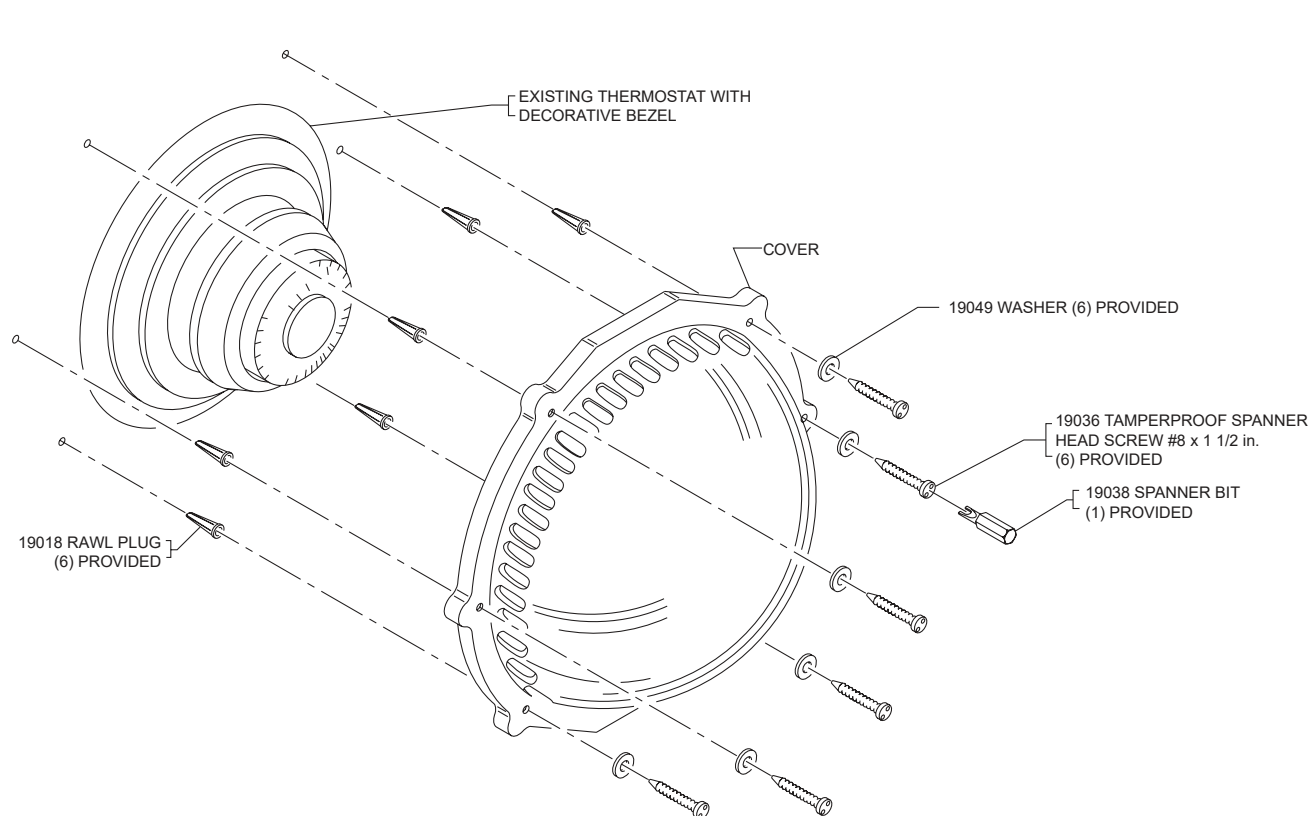

PRODUCT DIMENSIONS

INSTALLATION:

1. Centre protective cover over thermostat.
2. Using protective cover as template, mark and drill (6) 3/16 in. (4.7mm) diameter holes as shown.
3. Install the tamperproof fasteners using the supplied spanner bit (STI-9115) or the standard mounting screws (STI-9116)

CLEANING INSTRUCTIONS

To clean cover, remove from wall. Rinse with water to remove abrasive dust and dirt. Wash with soap or mild detergent using a soft cloth (DO NOT SCRUB). Rinse once more, then dry with a soft cloth or chamois. To remove grease or wet paint, rub gently with a cloth wetted thoroughly with naphtha. Then wash and rinse. DO NOT USE RAZOR BLADES.

INSTALLATION OF STI-9115 & STI-9116 THERMOSTAT COVERS

All specifications and information shown were current as of publication, and are subject to change without notice.

9115OCT2019