


# Theft Stopper®

## Install


STI-6200 Series

Rely on STI®


- 1.** Remove security screw with provided wrench.

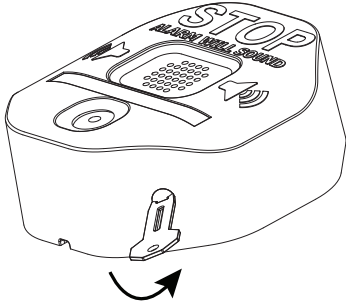


- 2.** To remove cover from base, push with thumb to separate (as shown).

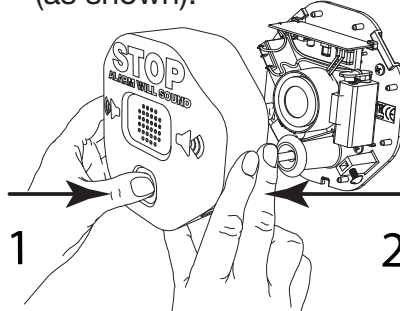


- 3.** Select volume setting by shifting black cap.

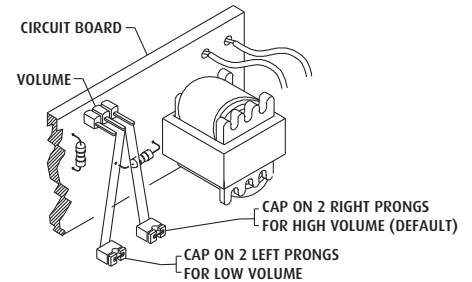


- 4.** Unwrap battery and connect. Insert 6" service cables into base to silence. Cable should not exceed past base edge.

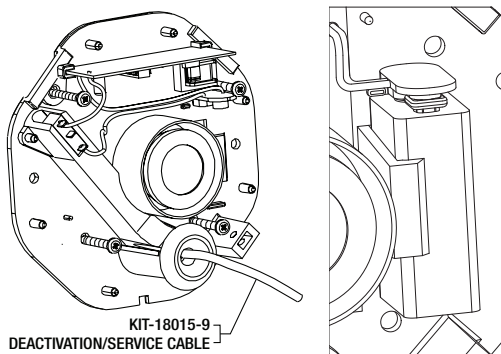


- 5.** Position base. Mark and drill four (4) holes 1" (25mm) deep. Using plastic anchor, drill 3/16" (4.5mm). Install into wood or steel: drill 9/64" (3.5mm). Mount using (4) M4 x 25mm screws. NOTE: Cable is approximately 16" – 18" long.

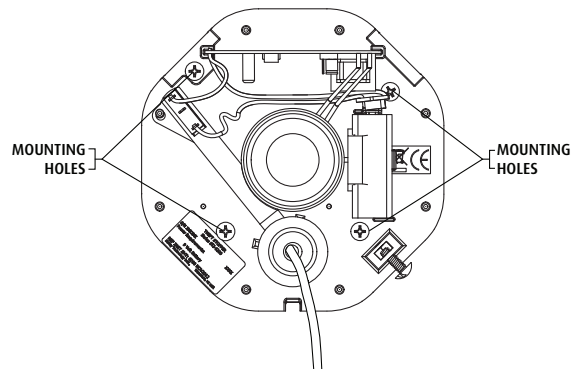

- 6.** Replace cover, snap lid from top, secure with security screw.

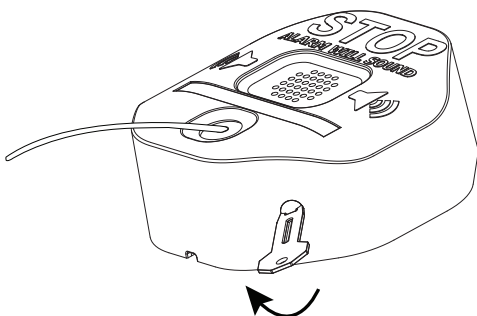

- 7.** Apply language label if desired.

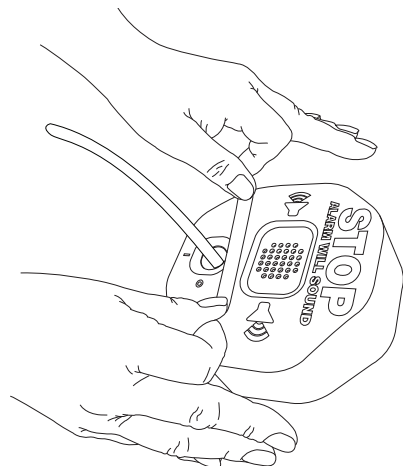


# Theft Stopper®


## Install

8. Route operating cable around a secure location on appliance and through cable sleeve clamp, and crimp securely. Assure it does not impede proper use of appliance.


Examples:

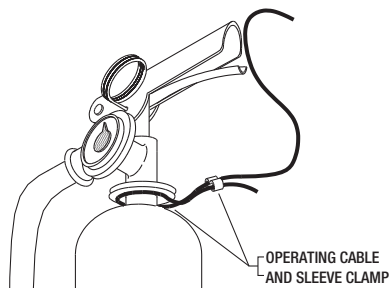

Fire Extinguisher


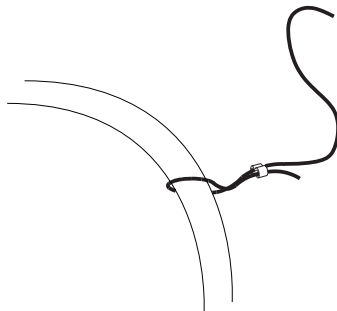


Emergency Chair

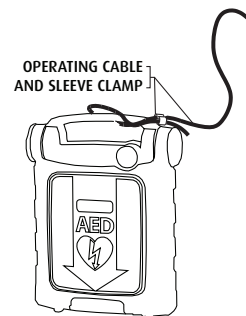

Defibrillator

9. Quickly remove service cable and thread operating cable into unit until cable bottoms out and alarm stops sounding. Retain service cable for future maintenance.

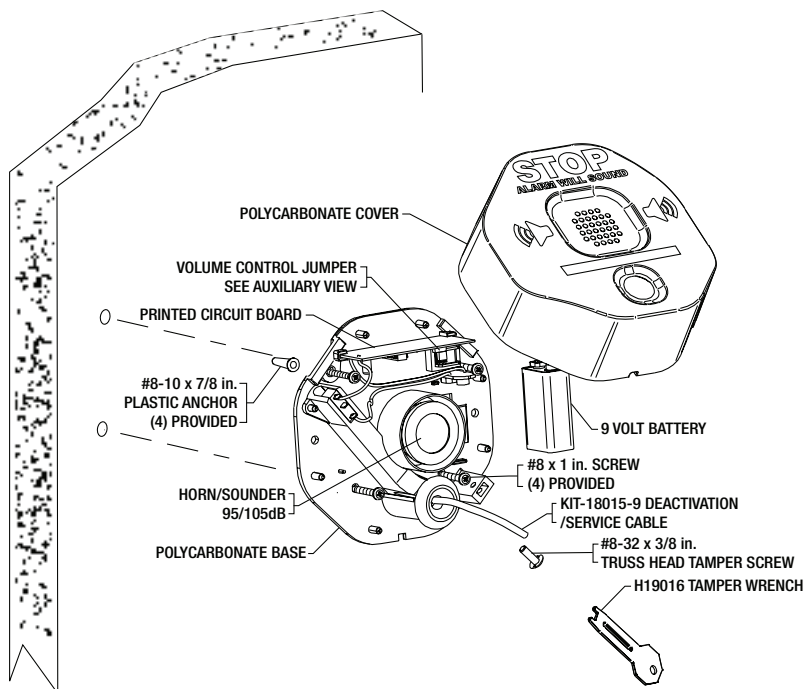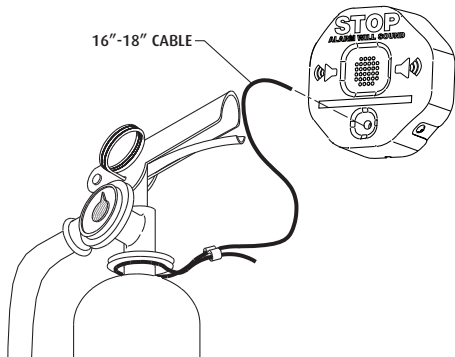

### Warranty

Three year warranty or a one year limited warranty (from date of purchase) on most products. See website for details. Electronic warranty form at [www.sti-usa.com/wc14](http://www.sti-usa.com/wc14).

- ⚠ WARNING:** This product can expose you to chemicals including Dichloromethane, which is known to the State of California to cause cancer, and Bisphenol A (BPA), which is known to the State of California to cause birth defects or other reproductive harm. For more information go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).



**Safety Technology  
International**

2306 Airport Rd • Waterford, MI 48327, USA  
Phone: 248-673-9898 • Fax: 248-673-1246  
info@sti-usa.com • www.sti-usa.com

Taylor House • 34 Sherwood Road • Bromsgrove, Worcestershire • B60 3DR • England  
Tel: +44 (0)1527 520 999 • Fax: +44 (0)1527 501 999 • info@sti-emea.com • www.sti-emea.com